


installation guide

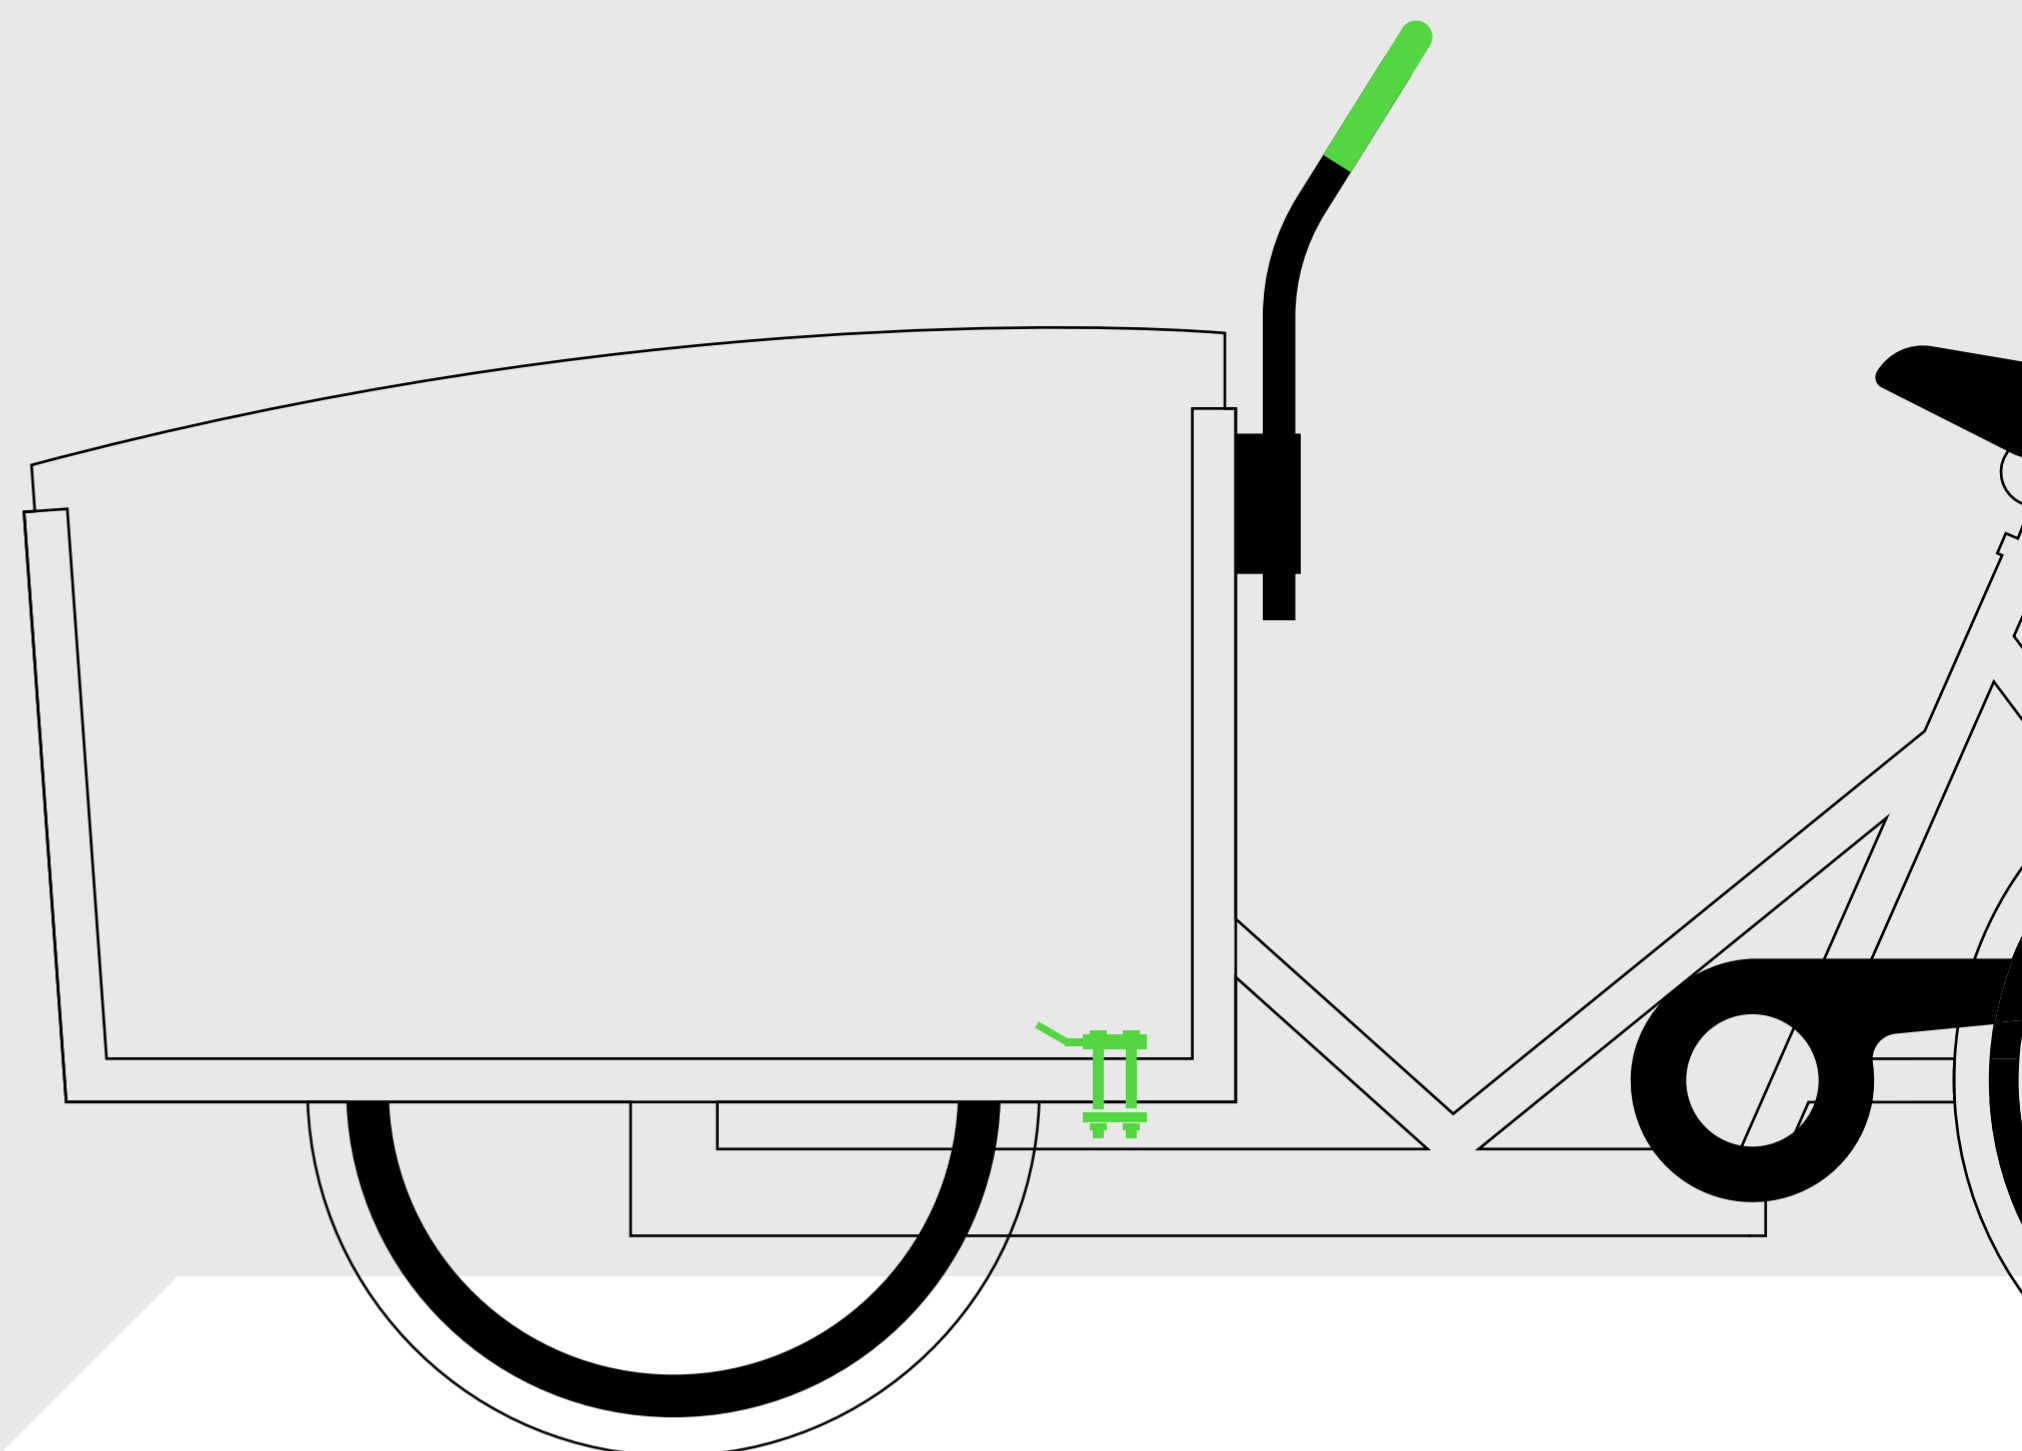

Worth knowing before mounting

Walter Isofix Bicycle Brackets can be mounted in all types of cargo bikes and fit car seats with isofix. Check for any obstacles under the base plate. If there should be obstacles under the base plate, the bracket / car seat can be moved slightly.

You are always welcome to call us on +45 53 50 52 61 or contact us by email in@ridewalter.com if you have questions regarding installation or others.

Tools for installation

Ø7 mm drill




Umbraco 3mm




Drill / screwdriver

8 mm wrench

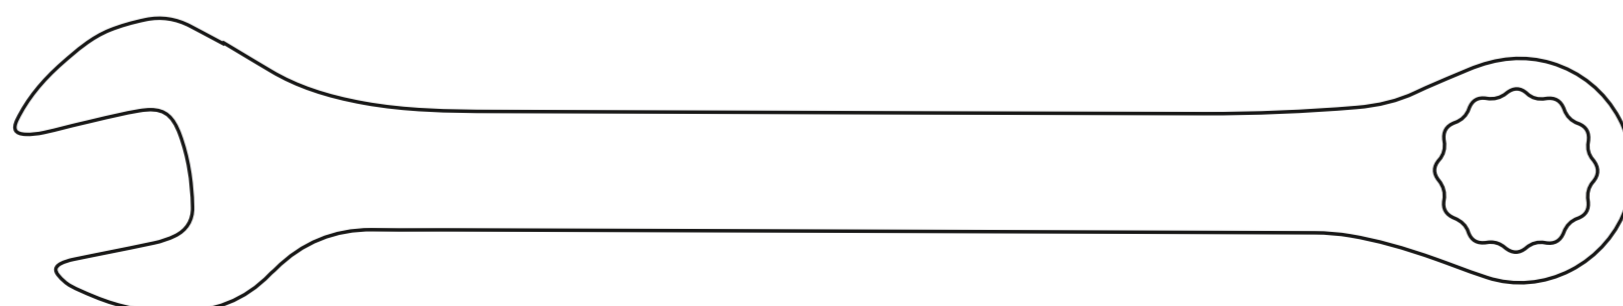


1

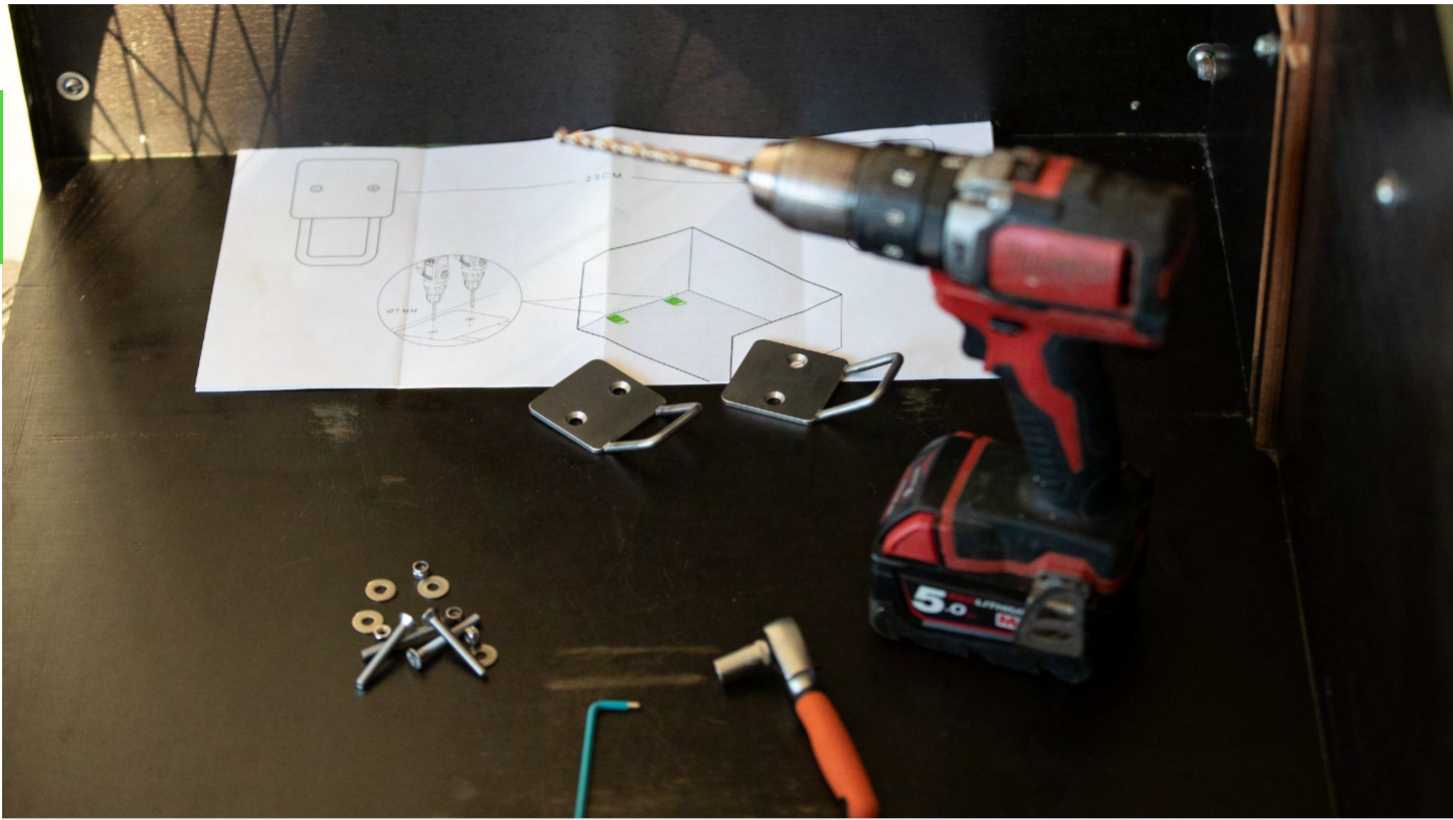

Find the tool to be used for installation

2

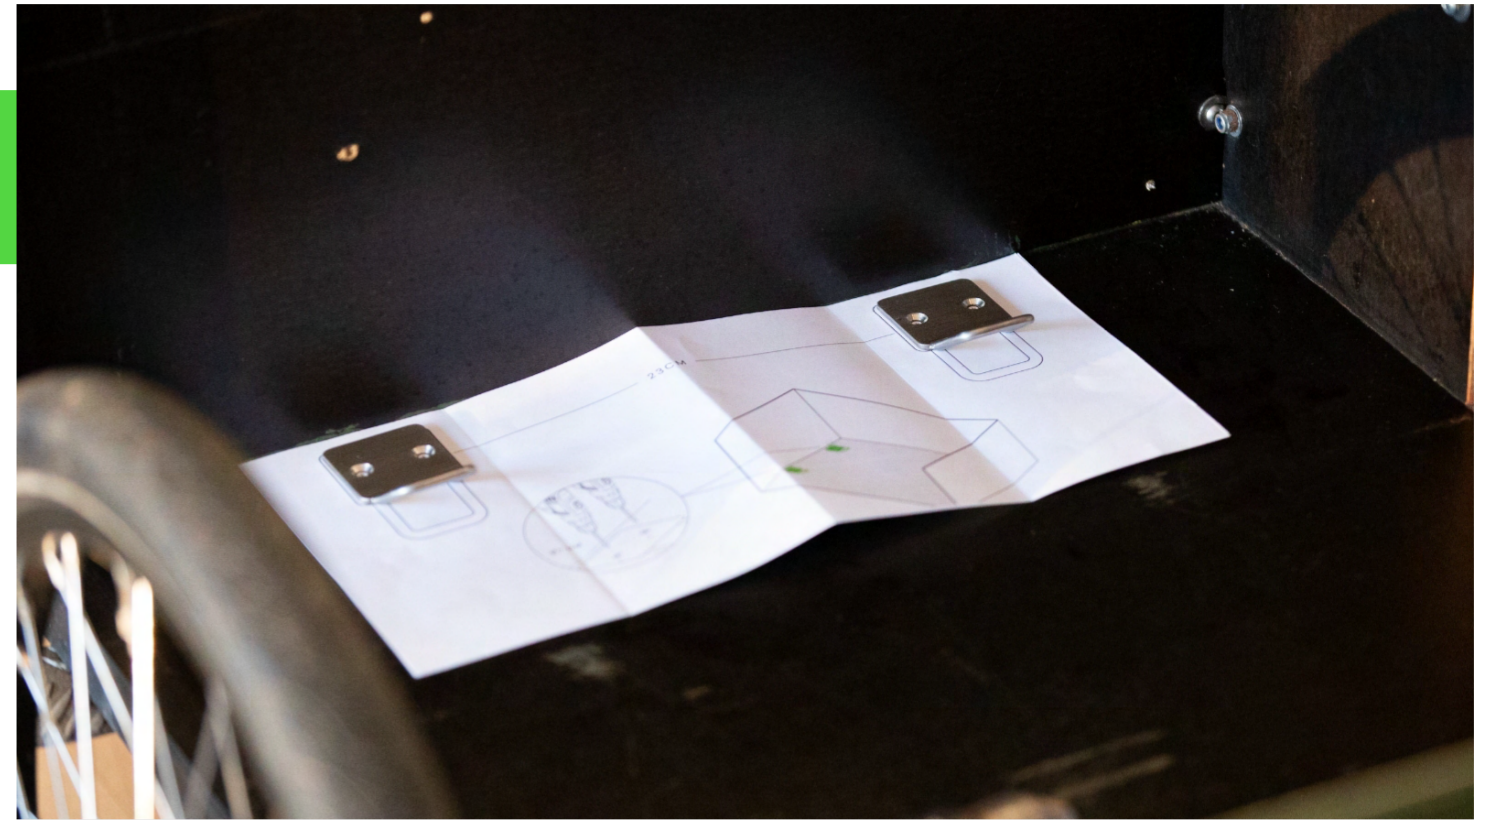


Place installation instructions in the middle of the bicycle cart bottom

3




Mark holes for the brackets following the instructions

4

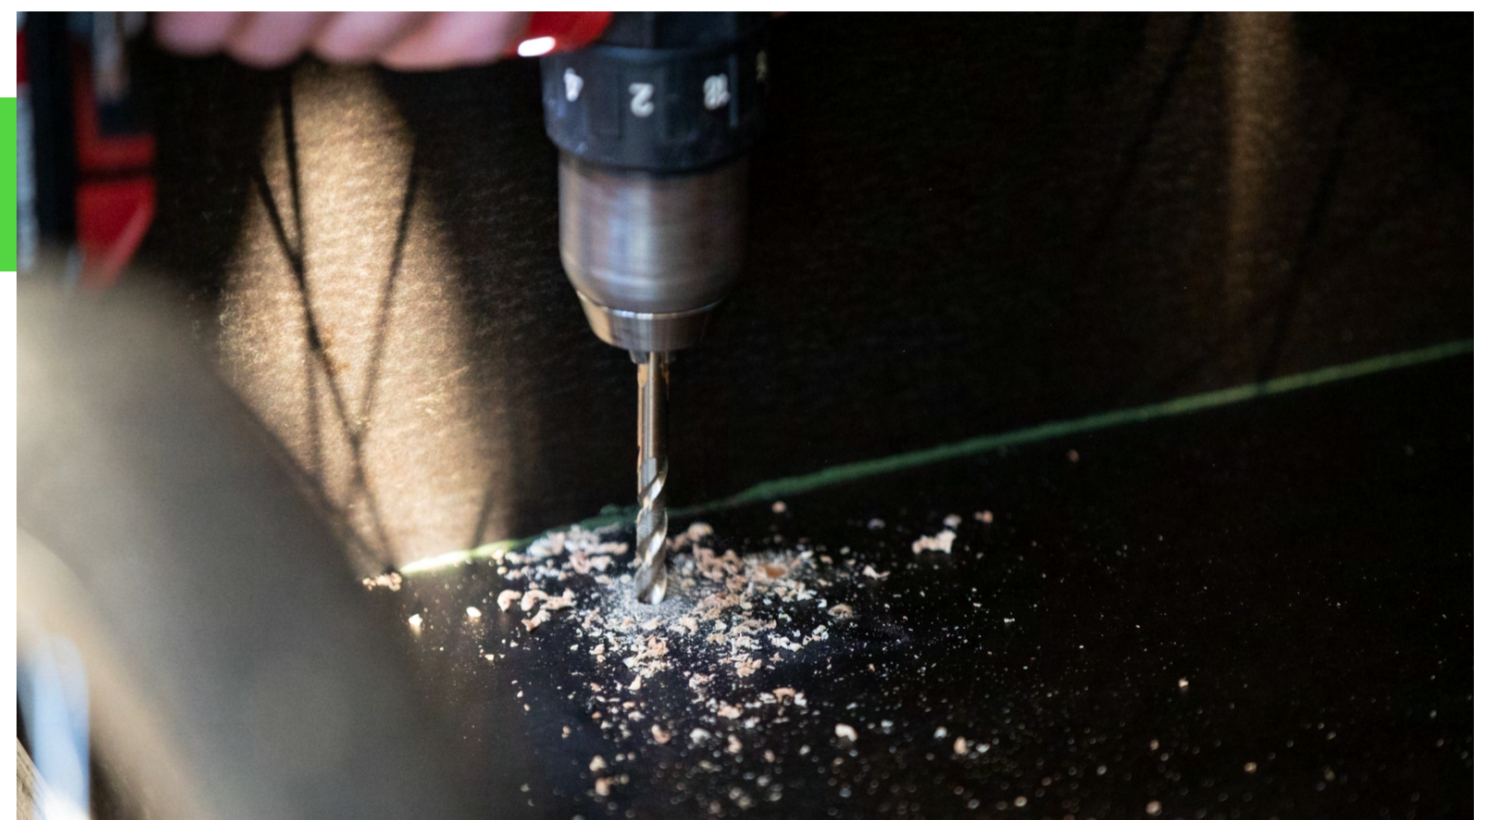

Use your $\varnothing 7$ mm drill to drill holes through the bottom plate of your cargo bike

5

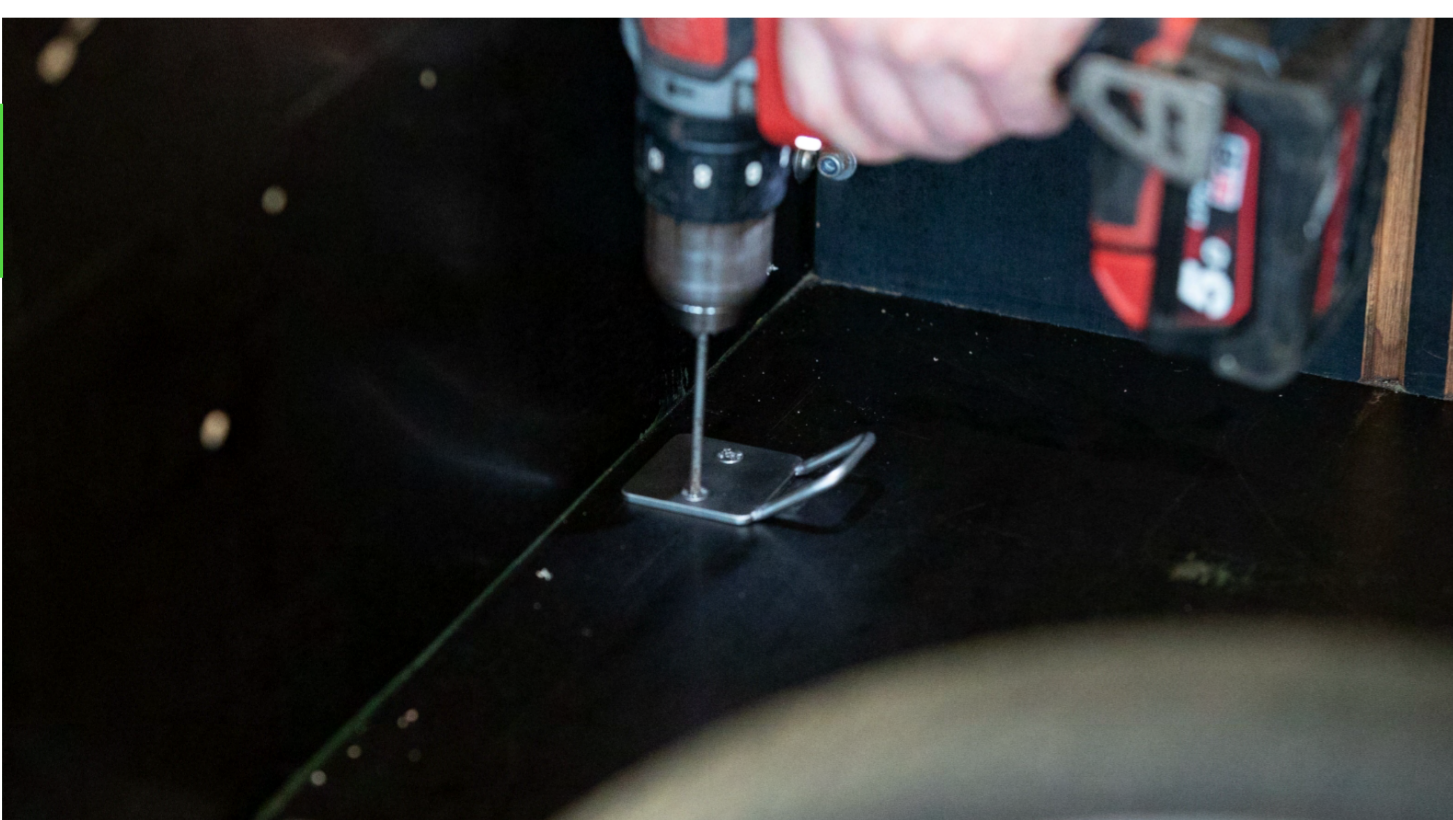

Mount your brackets and back plate with the stainless steel bolts, washers and nuts

6



After mounting you can easily fasten your car seat